

Installation instructions: 3-4" Deep Floating Shelves

Items included

Shelves



T-Brackets



Screws



Drywall Anchors



Tools you'll need


Drill



Drill Bit



Level

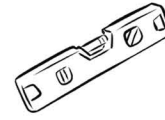

Pencil




The T-brackets may be tight when removing them from the shelf. If so, employ a screwdriver and/or needle nose pliers to assist. Avoid prying against the shelf's outside rim. Instead, target the center to prevent any potential breakage or damage to the shelf edge.

1 Prepare for Marking



Pull the T-brackets halfway out from the shelf. This will reveal the screw hole locations.

Position the shelf against the wall where you'd like it installed and mark the screw hole locations for one bracket.

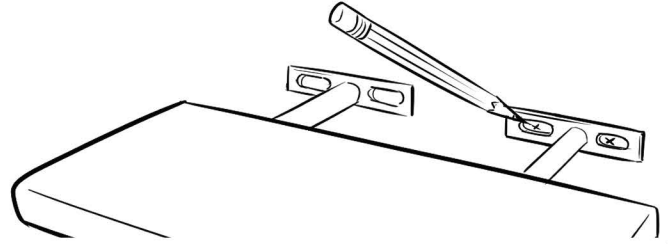

2 Drill Pilot Holes

For drywall: Use a 3/16" drill bit. Drill pilot holes where you've made your markings. Gently tap in anchors into these holes. (If the 3/16" drill bit seems too small, carefully opt for a slightly larger size).

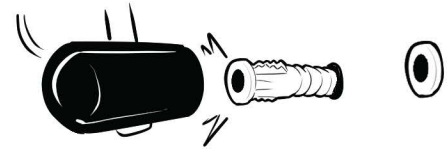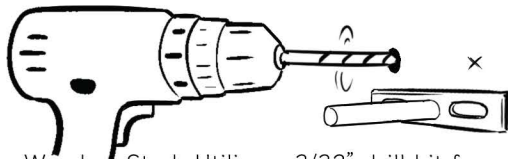



For Wood or Stud: Utilize a 3/32" drill bit for your pilot holes. Anchors are not required.

3 Install T-brackets

Attach the first T-bracket.


Slide the shelf partially onto this bracket. Align and mark the holes for the remaining T-brackets using a level.

Attach the remaining brackets to the wall (repeat step #2)

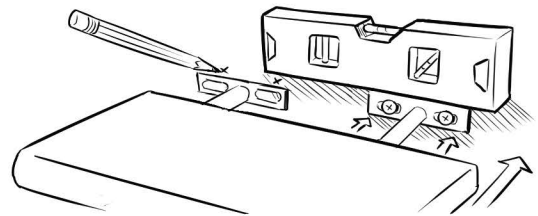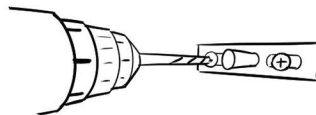


4 Mount the Shelf

Gently slide the shelf onto the T-brackets. It should fit snugly. If there's any misalignment, slightly loosen the corresponding T-bracket and make minor adjustments horizontally or vertically as needed. After adjustments, retry sliding the shelf in place.

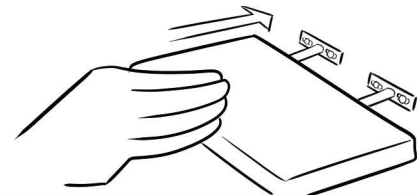

5 Completion

Once the shelf is securely in place and aligned, your installation is complete. Enjoy your new floating shelf!

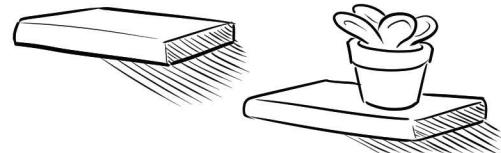

Visit nookwoodworking.com for more tips and tricks!