

# Installation instructions: Small Shapes

## Items included

Shelf



Threaded Insert Bolt



Drywall Anchor



## Tools you'll need

Drill




Drill Bit



### 1 Preparation for Drywall

Identify where you'd like to mount your shelf.

Ensure the area is free from obstructions or cables behind the wall.

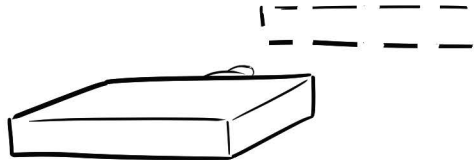


### 2 Drilling

Begin with a 1/4" drill bit. If needed, you can gradually increase the drill size.




Drill a hole into the drywall, keeping the drill as perpendicular to the wall as possible. This ensures the anchor sits securely.

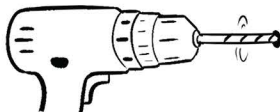

### 3 Anchor Insertion

Hold the anchor at the drilled hole and lightly tap it in using a mallet or hammer until it is flush with the wall.



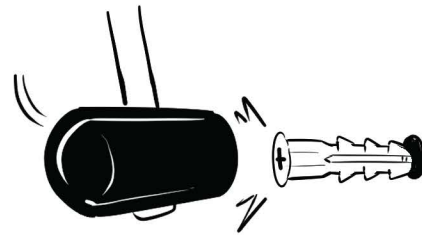


### 4 Mating the Shelf

1. Align the shelf with the anchor.


2. Twist the shelf into place, ensure it doesn't scratch the wall.

3. If one corner of the shelf is too close to the wall, apply gentle pressure in the opposite direction. This will balance the space between the shelf and the wall, ensuring an even fit.

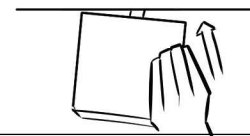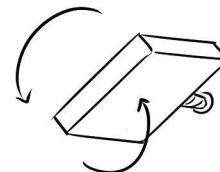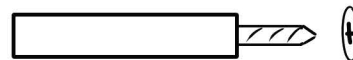

### 5 Finishing

Your shelf is now installed! Take a step back, ensure it's level, and enjoy your handiwork.

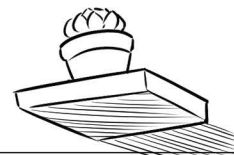

Visit [nookwoodworking.com](http://nookwoodworking.com) for more tips and tricks!