



Installation instructions: Coat Hanger Shelf

Items included

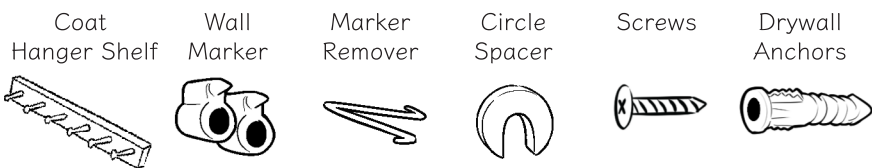


Tools you'll need

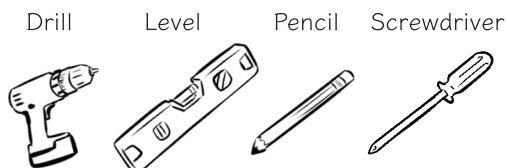

1 Preparation

Establish the shelf location.



Insert the wall markers into the keyholes. Ensuring they are level, press the shelf onto the walls to mark them using the dimples.

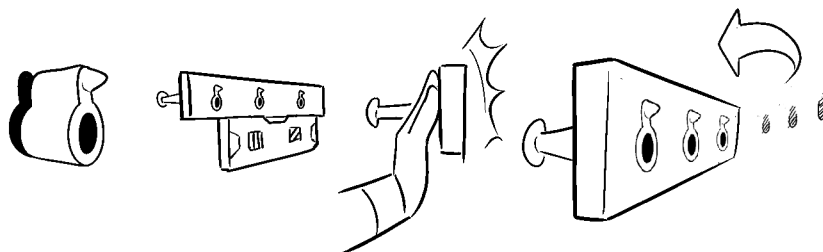

2 Drill Pilot Holes

For drywall: Use a 3/16" drill bit. Drill pilot holes at the dimple marks on the wall. (If the 3/16" drill bit seems too small, carefully opt for a slightly larger size).


Gently tap in anchors into these holes if necessary.

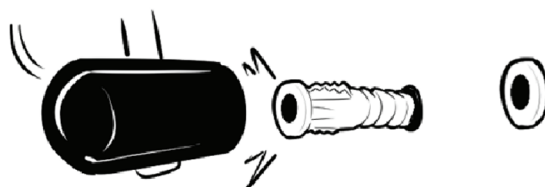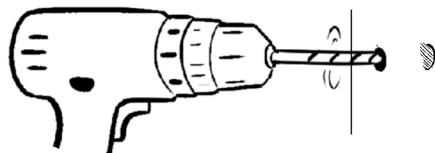

For Wood or Stud: Utilize a 3/32" drill bit for your pilot holes. Anchors are not required.


3 Insert Screws

Place the screws into the pilot holes. Hold the circle spacer against the wall and drive screws into the wall until flush with the spacer. Remove the spacer.


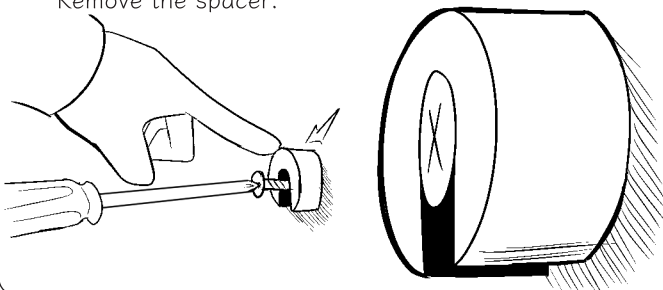


3 Install Shelf

Insert the marker removal tool into the wall markers to remove them from the shelf. Then push the shelf's keyholes onto the screws. If the shelf is loose, tighten the screws further.

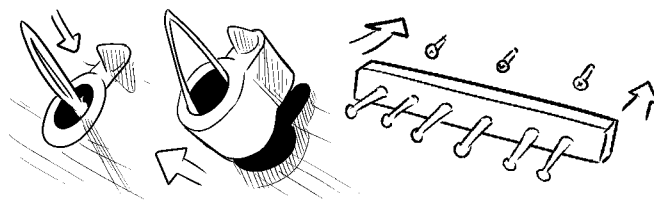

4 Enjoy your Coat Hanger Shelf!

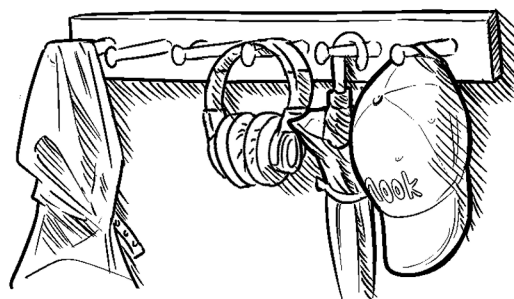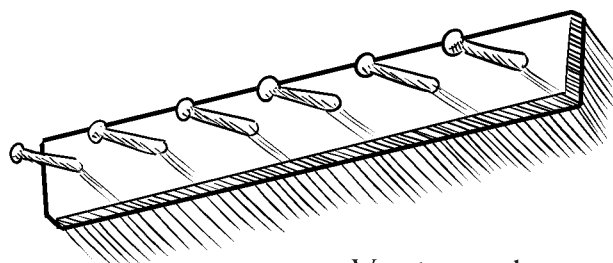

Visit nookwoodworking.com for more tips and tricks!