

Installation instructions: Ledge Shelves

Items included

Ledge Shelf



French Cleat Brackets



Screws



Drywall Anchors




Tools you'll need

Drill



Level

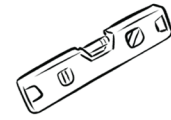


Pencil



1 Preparation

Establish the shelf location.


Use a level to draw a horizontal line at the top of the shelf. Also, mark the wall at the center of the french cleats that are already installed on the shelf.

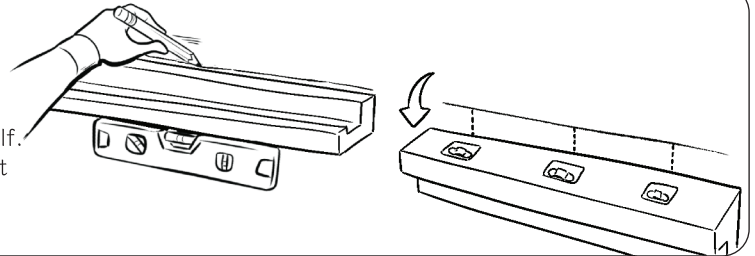

2 Align the French Cleats


Position the french cleats on the wall, ensuring the center aligns with the centerline and the top is ~1/2" below the horizontal line from Step 2.

Mark the screw hole locations.

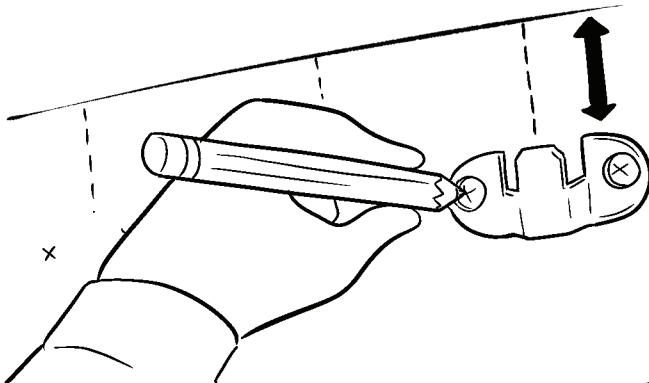


3 Drill Pilot Holes

For drywall: Use a 3/16" drill bit. Drill pilot holes where you've made your markings. Gently tap in anchors into these holes. (If the 3/16" drill bit seems too small, carefully opt for a slightly larger size).

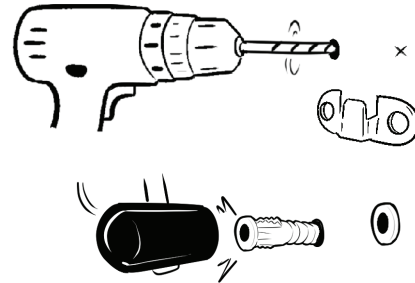


For Wood or Stud: Utilize a 3/32" drill bit for your pilot holes. Anchors are not required.

4 Install the French Cleats

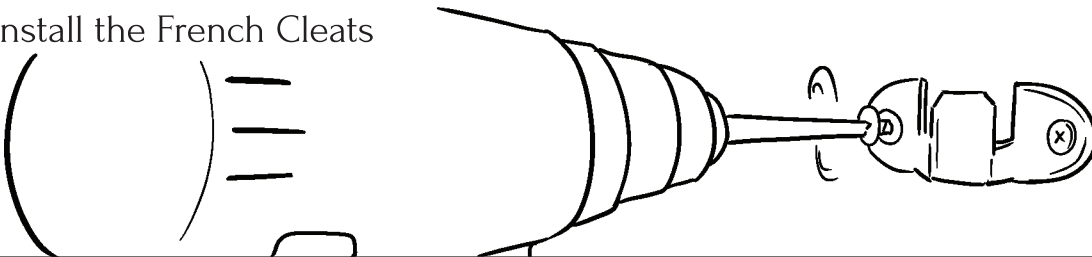

5 Mount the Ledge Shelf

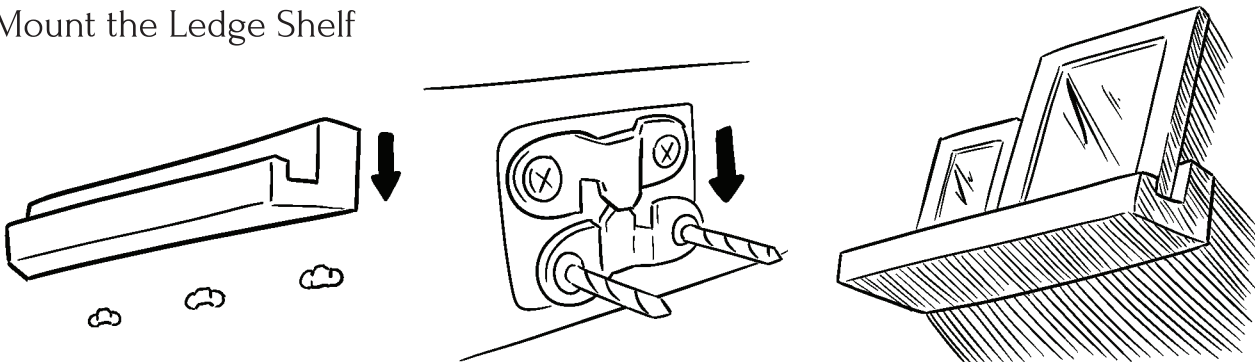

Visit nookwoodworking.com for more tips and tricks!